
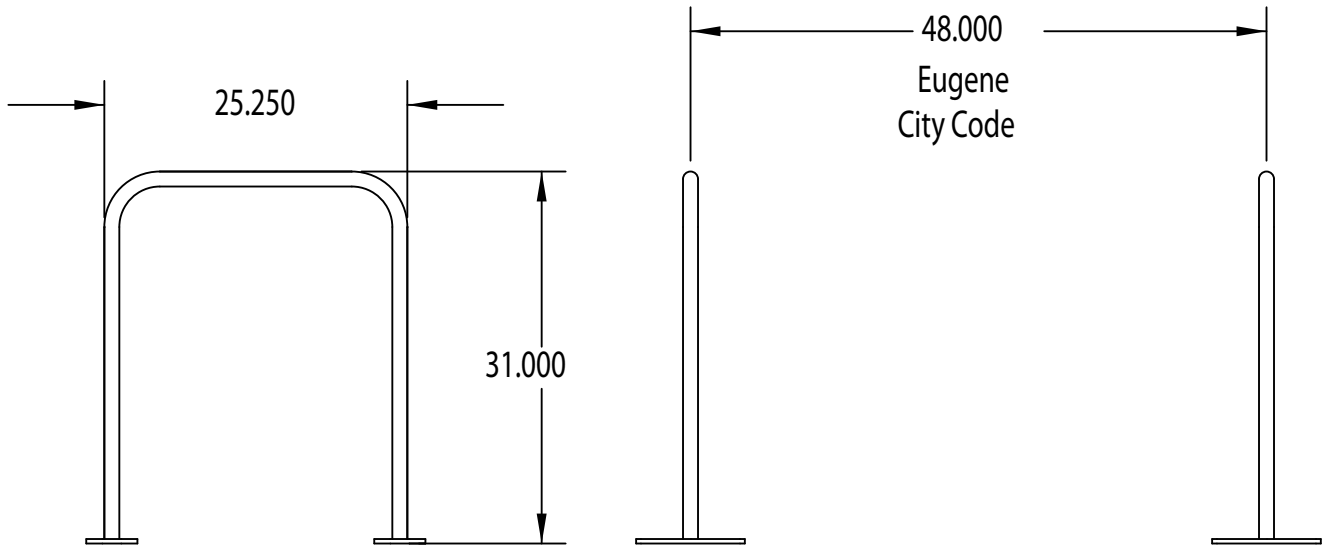


NOTES:

1. Eugene RackWorks recommends a spacing of at least 36" between racks.
2. Check with your local city code on rack spacing requirements. Eugene City Code requires at least 48" spacing.
3. For fastening methods, see drawings # 8 & 9.

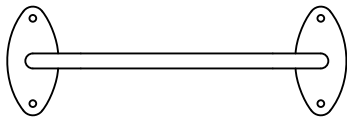

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
EUGENE RACKWORKS. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
EUGENE RACKWORKS IS PROHIBITED.

EUGENE RACKWORKS

CENTER FOR APPROPRIATE TRANSPORT
455 WEST 1ST AVE., EUGENE, OR 97401
TEL: (541) 344-1197 FAX: (541) 686-1015

1 7/8" High Security

Drawn by: Ray Brusasco	Date: 1/14/2005	REV: B
SCALE: 1:16	DWGR: 2	Sheet 1 OF 1